

XIOLIFT

西奥电梯

**XIOLIFT** 西奥电梯  
HANGZHOU XIOLIFT CO.,LTD.

☎ SERVICE LINE /400-826-9998  
服务热线 /400-826-9998

地址: 中国 杭州余杭经济开发区宏达路 168 号  
电话: 0571-86099898 传真: 0571-86992133  
网址: www.xiolift.com

Add: No.168 Hongda Road, Yuhang Eco-Development Area,  
Hangzhou, P.R. China  
Tel: 0571-86099898 Fax: 0571-86992133  
Web: www.xiolift.com



杭州西奥电梯有限公司版权 (C) 所有

- 本宣传册中的产品技术参数、规格及图形反映了截稿时止 (见封底版本号) 电梯型号的技术特点及配置情况, 我们保留随时改变产品技术参数、选型和颜色的权利。
- 本宣传册只提供一般信息, 并不作为合同文件, 具体配置参数以正式合同约定为准。

HANGZHOU XIOLIFT CO.,LTD. All right reserved

- The technical parameters, specifications and graphics of this product in this brochure reflect the technical characteristics and configuration of the elevator model when the deadline is closed (see the back cover version number). We reserve the right to change the product's technical parameters, selection and color at any time.
- This brochure only provides general information, not as a contract document, the specific configuration parameters to the formal contract shall prevail.

版本号: 2020.05A版  
印刷号: 2020.05.29



无机房住宅电梯 XO-REZO(MRL) Machine-room-less Residential Elevator  
**XO-REZO (MRL)**



# A DESIGNER FOR A HAPPY SPACE

## 幸福空间设计师

全新的无机房住宅电梯——XO-REZO (MRL)。基于成熟平台设计，全新结构改进，引入新一代控制系统，为您提供更可靠的产品设计方案、更多可能的空间利用，贴心为您打造更完美的居家生活。

XO-REZO 西奥电梯



COMFORTABLE HOUSE  
STARTS WITH THE ELEVATOR

## 舒适的家 从进电梯开始

精心设计的巧妙减震结构，集稳定、舒适于一体，  
遵循人性本真的亲和性，与心正临，久违而至。

### REZO系列平台，超十年品质沉淀

充分的市场验证，平台化设计，为用户的舒适体验  
提供稳定保障。

### 一体化上梁结构

 
减少安装误差，提供更好的乘坐舒适性。

### 横梁式曳引结构

受力均匀，并采用多重减震设计，隔绝主机震动。

### 控制柜宽电压设计

控制柜允许电压波动范围远高于国标，在电网波动  
时更能保证平稳运行。

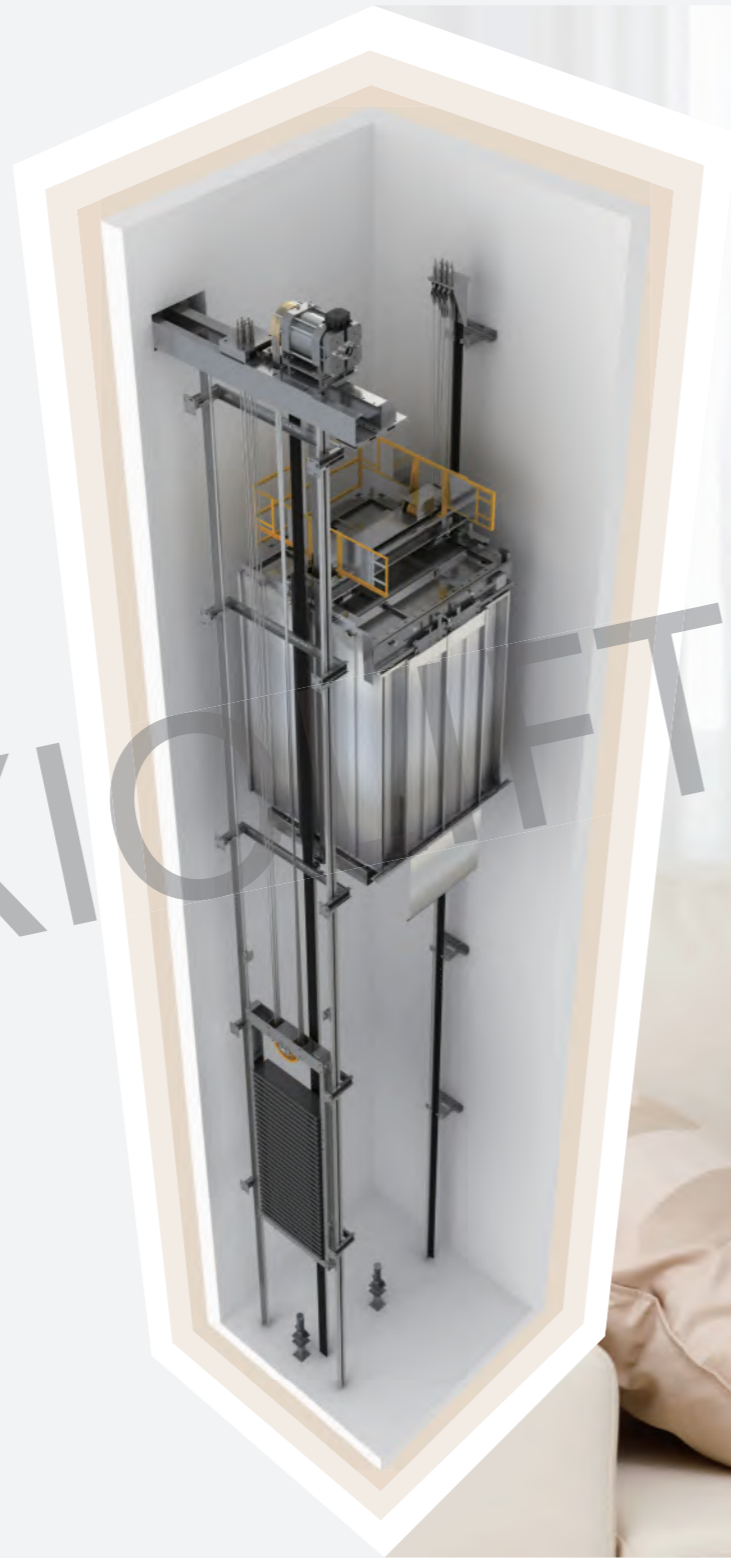



A SAFE HARBOR WITH  
CONSISTENT QUALITY ASSURANCE

## 安全港湾 品质一脉相承

核心技术源自欧洲，采用冗余式智慧安全设计，全方位打造高端居家安全乘梯空间，咫尺之间，尽显尊贵。

### 高品质主机

引进欧洲成熟设计，保留核心技术，自主研发的最新主机。

### 强劲动力平台

200万次  
试验验证

 
寿命长

精度高

灵敏度高

标配德国进口海德汉编码器，寿命长、精度高。

双摩擦副轴刹制动器，气隙免调节、免维护，制动平稳可靠，灵敏度高，经过200万次试验验证，品质性能得到全面保证。

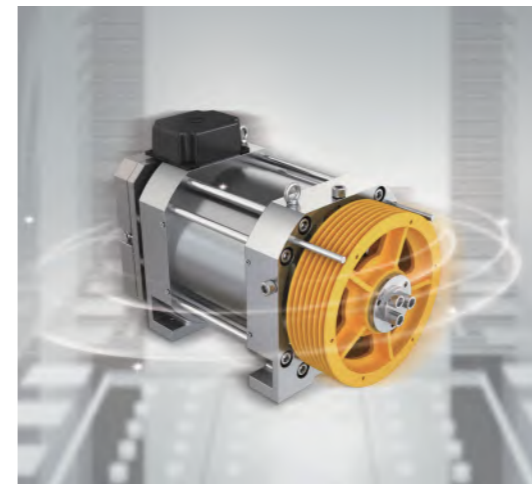

### 高集成度一体式控制柜

体积更小、性能更强，为用户节约每一寸建筑空间。



HIGH EFFICIENCY  
CREATES LOW CARBON

# 绿色节能 高效成就低碳

在传统的节能理念中融入低碳环保元素，从整梯到部件处处融入绿色设计理念。

## 能效认证

 
 
产品通过了德国TüV电梯能效及舒适度测试，达到行业A级。



产品通过了德国TüV  
电梯能效及舒适度测试

## 智能节能

当电梯长时间处于无人乘坐状态时，自动关闭显示屏、照明、风扇等用电设备，达到A级节能效果。

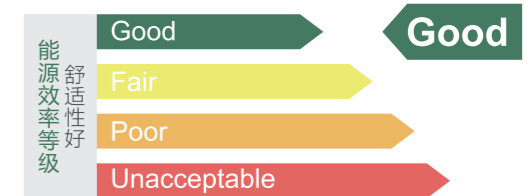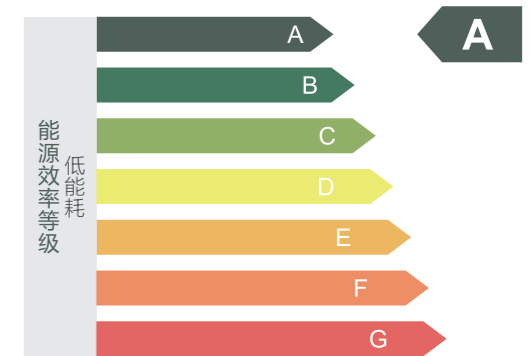



轿厢装潢  
Car decoration



标准轿厢装潢配置

 
Standard car decoration  
Configuration



吊 顶: XO-Z3309(L)  
轿 壁: 发纹不锈钢  
地 坪: XO-Z0470PVC

西奥电梯

可选轿厢装潢  
Optional car decoration

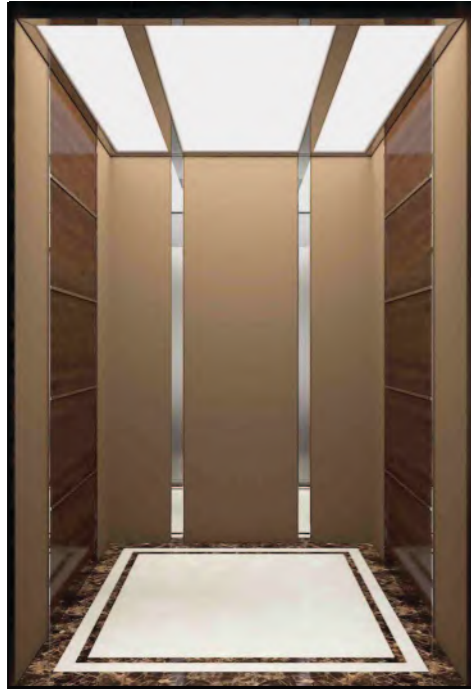

XO-Z1212

轿壁XO-Z1212J: 后壁: 中间喷粉钢板 (RAL1011) + 白镜面不锈钢, 两侧喷粉钢板 (RAL1011)  
侧壁: 中间防火板 (亮面9720G) + 白镜面不锈钢嵌条, 两侧喷粉钢板 (RAL1011)  
前壁: 和纹不锈钢  
吊顶XO-Z1212D(L): 白镜面不锈钢 (边框材质) + 乳白色亚克力  
地坪XO-Z0470: 拼花PVC

 
备注: 喷粉钢板和防火板颜色可替换 (该系列一共三款), 效果图仅适用于轿厢净深 ≤ 1750mm



XO-Z1212A韵





XO-Z1212B雅

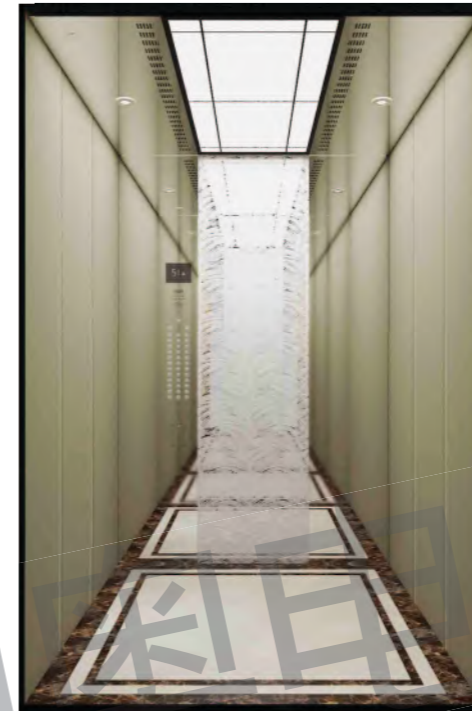

XO-Z1215

轿壁XO-Z1215J: 后壁: 中间白镜面蚀刻不锈钢(XO-Z0902), 两侧白镜面不锈钢  
侧壁: 喷金属粉钢板(RAL1035)  
前壁: 白镜面不锈钢  
吊顶XO-Z3301(L): 两侧边框白镜面不锈钢+LED筒灯, 中间框架喷粉钢板 (RAL9004) + LED照明 + 丝印亚克力透光板  
地坪XO-Z0470: 拼花PVC

  
备注: 效果图仅适用于轿厢净深 ≤ 1750mm

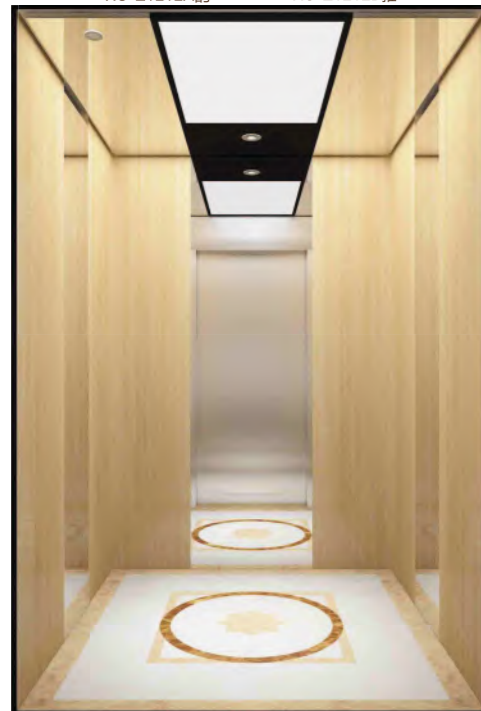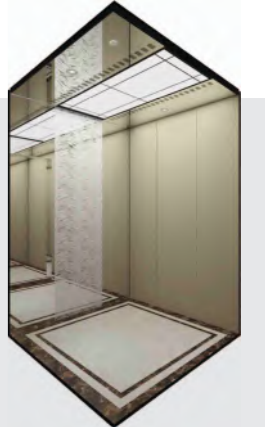

XO-Z1213

轿壁XO-Z1213J: 后壁: 中间白镜面不锈钢, 两侧木饰面贴膜 (FM-002)  
侧壁: 中间白镜面不锈钢, 两侧木饰面贴膜 (FM-002)  
前壁: 304短发纹不锈钢  
吊顶XO-Z3302(L): 两侧边框白镜面不锈钢, 中间框架喷粉钢板(RAL9004)+LED照明 + 亚克力透光板+LED筒灯  
地坪XO-Z0471: 拼花PVC

 备注: 贴膜材料可替换, 效果图仅适用于轿厢净深 ≤ 1750mm

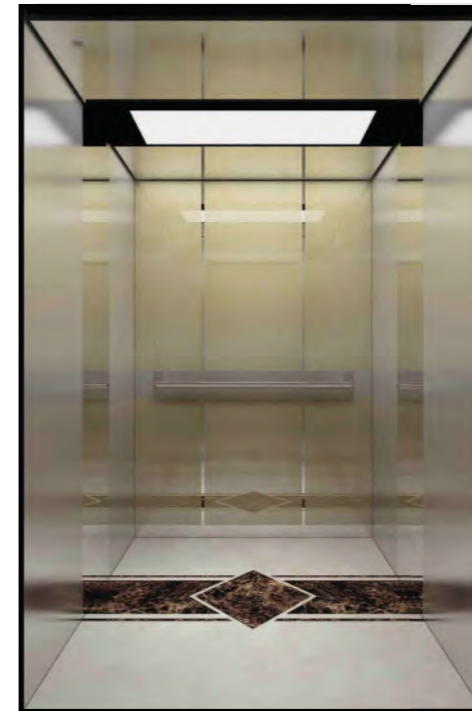

XO-Z1223

轿壁XO-Z1223J: 后壁: 防火木饰面 (8201G) + 白镜面不锈钢嵌条, 配白镜面不锈钢腰线  
侧壁: 中间白镜面不锈钢, 两侧304短发纹不锈钢  
后壁踢脚线: 白镜面不锈钢  
前壁: 304短发纹不锈钢  
前后白镜面不锈钢, 中间喷粉钢板 (RAL 9004) + LED灯具  
扶手XO-Z0506A: 白镜面不锈钢圆管扶手  
地坪XO-Z0474: 拼花PVC

备注: 效果图仅适用于轿厢净深 ≤ 1750mm



▲ 标准人机界面  
▼ Standard human Interface




操纵箱



COP2  
一体式操纵箱

 ▶ 标配显示

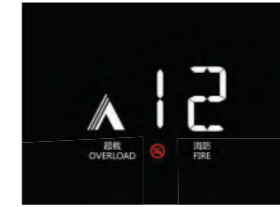

放大型视窗  
6.4"BND-LEDW  
LED白色段码显示

▶ 标配按钮



BR36D  
微亮型发纹不锈钢  
盲文按钮

西奥电梯  
召唤盒

召唤盒



XHB15-A  
无底盒外召唤

▶ 标配显示



4.3"BND-LEDW  
LED白色段码显示

▶ 标配按钮




BR36D  
发纹不锈钢盲文按钮

## 选配人机界面推荐

 
Optional human-computer  
Interface recommendation

### 操纵箱

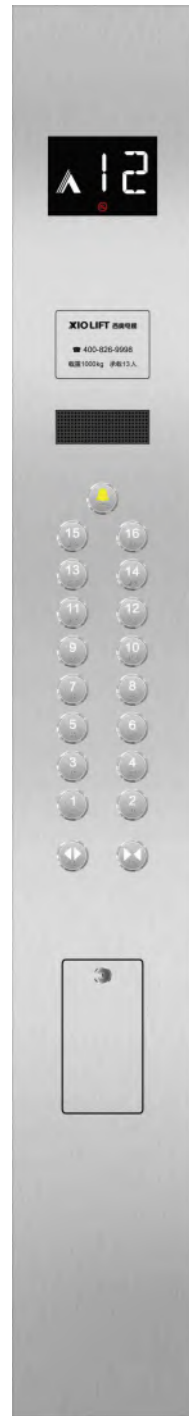

COP1  
分体式操纵箱

#### ▶ COP2可选显示

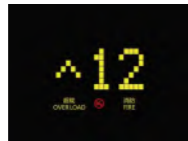 

放大型视窗  
6.4"EOD-LEDY  
LED黄色点阵显示



C201  
\*7.0" TFT-LCD  
炫彩液晶显示



C202  
\*7.0" TFT-LCD  
炫彩液晶显示

#### ▶ COP2可选按钮



BS34D  
微亮型发纹不锈钢盲文按钮



BR34B  
微亮型白镜面不锈钢盲文按钮

### 召唤盒

XHB17-A无底盒外召唤



4.3"BND-LEDW  
LED白色段码显示



BR34B  
白镜面不锈钢盲文按钮

XHB15-A无底盒外召唤

#### ▶ 可选显示



4.3"EOD-LEDY  
LED黄色点阵显示

#### ▶ 可选按钮



BS34D  
发纹不锈钢盲文按钮

## 可选轿厢装潢

 
Optional car decoration

### 可选吊顶



XO-Z3301(L)

两侧边框喷粉钢板 (RAL1013) +LED筒灯,  
中间框架喷粉钢板 (RAL9004) +LED照明+  
丝印亚克力透光板

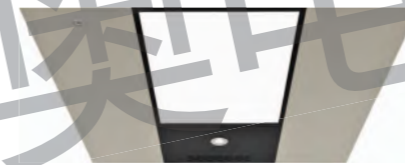

XO-Z3302(L)


两侧边框喷粉钢板 (RAL1013) +LED筒灯,  
中间框架喷粉钢板 (RAL9004) +LED照明+  
亚克力透光板

### 可选地坪
 
#### PVC



XO-Z0474

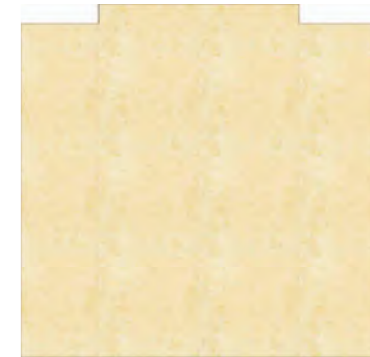


XO-Z0464

### 可选扶手



 XO-Z0506A



XO-Z0509

\* 喷涂钢板轿厢标配COP1分体式操纵箱, 其余材质轿厢不可选该操纵箱



## Basic function 基本功能

### ↑ - 运行功能 Run function

全集选控制 Full collective operation	在信号控制的基础上把呼梯信号集合起来进行有选择的应答 In the automatic operation state, the elevator will automatic response the signal from instructions, operation direction etc
满载直驶 Load non stop	轿厢满载时, 不响应外呼信号, 执行轿内信号 When the cabin is fully loaded, the elevator does n't response the hall calling signal, executes the car-internal signal
自动返回基站 Auto-return to main floor	当轿厢在设定时间内无外呼和内选时, 电梯将自动返回设定楼层(基站) If no registration of calls or operations after preset timeout, the car will return to preset main stop and wait there
错误指令取消 Cancel error calls	当电梯未运行时, 可以通过连续双击该楼层的内召按钮, 取消该已登记的信号 Before the car starts, the registration of a call or operation can be canceled by double click of this button
楼层间距自学习 Hoistway floor space self learning	系统自动记录各层高度, 在电梯运行时进行精确的距离控制 The system automatically record each floor height when the elevator normal operation, it can win precisedistance control, so as to realize the dock directly
锁梯开关 Key switch	锁梯开关动作后, 系统不再响应外召指令, 待电梯响应完轿内所有指令后, 自动返回基站 Lock key moves, the system cancel all call signals, after the elevator response the car call instruction signals, automatically returns to base floor
开关门按钮 Door opening button Door closing button	轿内设置开、关门按钮, 电梯未运行时, 可以按开门按钮, 使电梯开门; 按关门按钮, 可以取消开门等待时间, 立刻关门, 提高运行效率 Door open and close button are set up Inside of the cabin, when the elevator is not running, you can press the open button to open the door; press the close button to cancel the open waiting time, close the door at once. improve the running efficiency
厅外、轿内开门时间分别控制 Door opening closing adjusting	系统可以根据需要, 设置厅外、轿内召唤时, 不同的开门等待时间 Rise the system performance by adjusting the door hold time for both car door and landing door separately
自动校正运行 Auto-correct operation	当电梯失去位置时, 电梯自动进行校正运行, 找到电梯的正确位置 When elevator lose position, elevator auto-correct operation to the right position
就近平层功能 Nearby layer function	当电梯丢失平层位置时, 无需到底层复位, 到就近楼层停靠, 纠正位置, 节约乘客等待时间 When the elevator miss the leveling location, needless to move to bottom layer for replacement, only stop at the nearby floor, save the passenger's time
关门等待取消 Door closing cancel	可以通过按下轿内的关门按钮, 使电梯立刻关门 Through clicking the close button to close the elevator immediately
本层厅外重开门 Re-opening for landing door	当电梯在本层时, 可以通过按下电梯运行方向同向的外召按钮, 使电梯重新开门 In normal closed process, when pressing the hall button, if the running direction of hall call button is the same with the elevator running direction, the elevator will be open again
无称重力矩补偿 Torque compensation without weighing	电梯启动时, 不需要增加称重开关, 系统自动根据轿厢当前的重量, 进行力矩补偿, 达到良好的启动舒适感 When elevator starts, system would compensate torque due to car current weighing without adding weigh button, to create good starting comfort
末站换向预指示 Terminal Station inverting preindication	电梯运行至目的层之前, 计算得知响应该目的层后, 已无相同方向的指令和方向时, 显示方向提前换向 Before the elevator operates to the target layer, the calculation of the response after the objective layer, instruction and direction have no the same direction, the display direction advance commutation
司机服务 Attendant service	轿箱内配置有司机开关时, 动作此开关电梯进入司机服务, 由司机决定电梯的开门、关门 The Attendant Operation feature allows semi-automatic operation with manual control
独立服务 Independent service	轿厢内配置独立服务开关, 此开关动作时, 电梯脱离群控, 不响应外召指令 This function is designed for meeting customers' special needs. When switched on independent service the elevator will only answer any registered car call deviating from group control, regardless of the hall calls while opening or closing the door by manual control and operating according to customers' registered signals

### + - 安全功能 Security features

端站保护 End protection	当电梯行驶至终端楼层时, 未降至系统设定的速度时, 保护装置将强制减速, 保证安全 If the speed is not slowed to the preset value while the car reach the end floor, a forced deceleration will be carried out by system in order to protect the safety of the car
故障自诊断 Error self-diagnosis function	系统可以自动诊断并记录电梯的故障信号, 使用专用工具可以迅速排除故障 The system can automatically diagnose and record the elevator errors signal, use the special tool quickly eliminating errors
驱动设备过热保护 Drive overheat protection	如电机温度超过限值, 电梯将完成当次运行后, 进入待机状态, 温度恢复后自动恢复正常工作 Self-protection mode will be achieved if the temp of the motor exceeds the preset value due to the heat made by motor itself or the high temp in the environment. The car stops at the nearest floor, unload and shut down the light and ventilation; once the temp falls down to the preset value, the car will recover
钢丝绳滑动自检功能 Steel wire rope sliding self-test function	实时监测曳引钢丝绳滑动相对位移量 Real-time monitoring of relative displacement of traction steel wire rope
关门力矩保护 Close torque protection	如轿厢门关闭时发生机械卡阻, 当力矩超过预定值时, 电梯门将重新打开 If the resistance torque reached the preset value, the door will reopen
速度异常检测功能 Speed anomaly detection	系统通过对编码器反馈信号与系统给定速度进行比较, 对电梯运行速度进行控制, 一旦两者偏差超出系统允许的范围, 系统进入保护, 电梯停止运行 By monitoring and comparing the encoder feedback speed signal and system preset speed value. The system can master the elevator running speed. Once both difference value is beyond the scope of the system allows, the system into the protection of state, the car stop running
接触器异常检测功能 Contactor anomaly detection	系统根据接触器控制命令状态检测主接触器、抱闸接触器的反馈, 如发现异常, 系统进入保护, 电梯停止运行 According to the contact device control command system detecting state main contactor feed-back, if discovery is unusual, the system will enter a state of protection, the elevator stops running
电网异常检测功能 Power grid anomaly detection	电网波动幅度超过一定的安全范围, 错相、缺相时, 系统进入保护状态, 电梯停止运行 Power grid volatility by over a certain safety margin, the system into the protection of state, the elevator will stop running
光幕门保护 Light curtain protection	在电梯入口形成光幕防护网, 每一扫描循环内有154束红外线, 反应时间少于0.1秒 Light curtain protection fence is set up in the entrance of elevator, every scan loop has 154 bunches infrared rays, reaction time of 1 second
超载报警 Overload protection	当电梯内的乘客超过电梯额定负载后, 蜂鸣器响, 发出超载报警信号, 提醒乘客离开, 取消已登记轿内指令 When the load of the car exceeds rated capacity, Overload operations is triggered, this operation opens the door, sounds the buzzer, and illuminations the overload lamp. The overload conditions is removed when the weight of the car falls below the rated load
轿厢开、关门延时保护 Delayed car protection	当电梯到达某一层开门时, 由于阻力等原因在设定时间内没有开门到位时, 电梯会进入开门保护状态, 在本层尝试开门三次不成功, 则运行到下一层开门; 当电梯关门过程中遇到阻力等原因在设定时间内没有关门到位时, 电梯进入关门保护状态, 不响应呼梯指令 When the elevator reaches a floor layer, the door isn't opened completely in the established time because of obstacle or other reasons, the elevator will enter the open protected mode, after try to open the door unsuccessfully in this layer three times, and runs to the next layer to open the door; When the door isn't closed completely in the established time because of obstacle or other reasons, the elevator will enter the close protected mode, no response to the command for calling
抱闸异常检测功能 Break anomaly detection	当系统发出运行命令时, 检测到抱闸未打开时; 或者系统未发出运行命令, 却检测到抱闸打开信号, 电梯都将保护, 不能运行 Real-time detection system brake arm action state, if different is discovered between the actual state; And control command, the system will state into protection status, the elevator stops running
紧急消防返基站 Emergency fire return to the base landing	大楼发生火灾时, 系统在接收到火警信号后, 将取消所有指令和召唤信号, 驱动电梯直接返回消防层, 开门疏散乘客 When fire broke out in the building, after the system receive the fire alarm, the elevator will cancel all the commands and calling signals, drive the elevator return to the fire-fighting layer, open the door and evacuate the passengers
厅门自学习 Landing door self-learning function	当增加层站时, 必须进行厅门自学习, 确保安全后方可正常运行 When add the layer stop, carry out the landing door self-learning, after make sure the safety, the elevator can operate normally
安全救助功能 Security rescue function	当电梯监测到异常时, 在保证安全的前提下, 进入安全救助运行模式, 发出语音安抚和提示, 并就近楼层停靠开门释放乘客, 释放乘客后根据实际情况智能判断电梯是否可再运行 When the elevator monitors the abnormal, under the premise of ensuring security, it enters into the security rescue operation mode, issues voice message to appease and prompt, and stops at the nearest floor to open the door and release passengers, after which, according to the actual situation after the accident, determines whether the elevator can run again.



## 应急功能 Emergency functions

五方对讲 Five sides interphone	轿厢、轿底、轿顶、机房和监控室之间的一个对讲系统 There is an interphone around car, car bottom, car roof, machine room and monitor room
轿厢警铃 Alarm bell	发生紧急情况，乘客可按动轿内操纵箱上报警按钮，向外报警 In case of emergency, the alarm bell will be activated by pressing the alarm button in operating panel
机房紧急电动运行 Emergency electric operation in machine room	控制柜内设有机房紧急电动运行装置，发生紧急情况时，可由专业人员在机房进行操作 An emergency operation with electric device is installed in machine room, when an emergency happens, the professional maintenance staff operate the device rapidly to rescue operations in the machine room
轿厢内应急照明 Emergency light	轿厢内设有应急照明装置 Emergency light in the car will start whenever there is a power cut

## 节能功能 Energy-saving features

轿厢照明风扇自动控制 Lighting & Fan control in car	在规定时间内无呼梯信号，轿厢内照明及风扇会自动关闭以节约能源 The elevator in standby mode, if the lift don't receive any instructions within the preset time, the elevator, automatically shut off the car lighting and fan, in order to save energy
显示节能 Display energy saving	当长时间没有呼梯信号后，显示屏自动进入节能模式 After a preset timeout without hall call registration, display will turn off for energy saving

## 人机界面 Man-machine interface

轿厢到站钟 Passing chime in car	当电梯运行到站时，轿厢到站钟会发出响亮的钟声提醒乘客 When the elevator operates arrive station, the car will remind the passengers with a loud bell
厅外及轿厢方向指示 Hall & Car direction Indicator	在电梯运行时，在外召和轿内显示都会显示电梯的运行方向 Both car and hall screen will display the elevator running direction
轿内、厅外显示 Car & Hall screen	操纵箱和外召显示配备显示器，显示楼层及电梯运行方向等信息 The indicator in the car operation panel or in the hall call panel will display the elevator floor position and running direction by arrow signals
个性化楼层显示设置 Creative floor display	可以根据客户的需求，设置不同的楼层显示信息，该信息可设数字0-9，字母A-Z或者任意两个字符的组合，也可以是3位显示（仅限TFT，EOD显示器）。注：段码显示器不能区分数字0与字母O，数字5与字母S。 The elevator can be based on customer demand, you can set a different floor display information, this information can be a combination of letters numbers 0-9, A-Z or any of the two characters, but also can be 3-digit display(TFT, EOD display only). Note: segment display can not distinguish the number 0 and the letter O, the letter S and number 5.
轿内消防状态提醒显示 Fire state show inside the car	当发生火灾时，通过轿内显示，提醒乘客退出电梯、不要乘坐电梯 When fire broke out, by means of show on the inside of car, remind the passenger to leave the elevator, don't take the elevator
按钮微亮 luminous button	轿厢内指令按钮未登记时微亮（约全亮的10%），登记指令后全亮。电梯按钮清晰明亮，仅限BR36D和BS34D按钮 When the command buttons in the car are not registered, keep Shimmery(account for 10 percent of total bright), after finish the command, the light will be bright totally, the buttons of elevator are vivid and bright, BR36D and BS34D buttons only.

## 智能 Intelligence

层站召唤智能登记 Landing call intelligent registration	群控模式下，当一台电梯未能接走所有等待的乘客，该层站按钮将自动再登记并保持呼梯状态，系统将自动派遣另一台电梯来服务 In the group control mode, when an elevator fails to pick up all the passengers waiting, the landing button will automatically re-register and keep the call state, and the system will automatically send another elevator to serve
开门保持时间智能调节 Door opening time intelligent adjustment	电梯系统根据层站出入口人流情况，以及按照轿内指令、厅外指令的不同自动对开门保持时间进行自动调整。 The elevator system automatically adjusts the opening time of the door according to the different flow of the entrance and exit of the landing station and according to the car instructions and the hall instructions.
控制系统温度监测 Control system temperature monitoring	实时监测控制系统温度情况，在检测出有过温趋势时，提前转入安全救助模式运行，防止停梯困人 Real-time monitoring of the temperature of the control system, in the detection of over-temperature trend, transfer into the security rescue mode operation in advance to prevent people from getting stuck
智能舒适运行 Intelligent and comfortable operation	控制系统根据不同目的层间距自动计算最优运行曲线，使电梯平稳舒适运行 The control system automatically calculates the optimal running curve according to the spacing of different target floors, so that the elevator operates smoothly and comfortably
按钮粘连自动识别 Button sticking automatic identification	控制系统可以自动识别出厅外召唤按钮的粘连或卡住情况，自动去除该粘连或卡住的召唤指令，避免电梯由于外召按钮的粘连或卡住情况而无法关门运行。 The control system can automatically identify the sticking or jamming of the hall call buttons, automatically remove the call command stuck or jammed, to avoid the failure of closing the door and operation of the elevator due to the sticking or jamming of the hall call buttons.

## 特殊运行 Special run

防捣乱保护 Anti- nuisance car call protection	为避免空梯运行，在一个较短的时间内如同时按下三个及以上按钮，则会被视为捣乱操作，同时取消轿厢内所有召唤。 In order to avoid empty running, if three or more buttons are pressed in a very short time, it will be regarded as a disruptive operation. Meanwhile, all calls in the car will be cancelled.
自动泊梯 Parking	电梯将运算不同的楼层信息，并控制各台电梯自动停泊在不同楼层，提高效率 Elevators in a same group will park on different floors once spare in order to shorten the response time
厅外呼梯切除开关 Hall call cancel	主板上设置开关，只需通过拨码，就可以取消外呼指令，方便调试、检修等专业人士操作 If personnel want to adjust and maintain elevator, they could dial up on the button of main panel to cancel outside call
静态定位功能 Statics location function	电梯安装时，无需将钢丝绳从主机上脱开，进行主机角度定位，方便工地安装 When the elevator is installed, without take the wire cables away from the main machine, Host angle positioning, convenient to install for worksite.
轿顶检修 Top of car inspection	轿顶设置检修开关，可以方便检修人员，在井道内进行检修等操作，此时，机房检修开关无效 Set up the repair switch in the top of car, convenient for maintainer. When the maintainers are repairing or other operations in the wellhole, the repair switch is invalid at this time
静音模式 Silent mode	针对酒店、公寓等场所设计，可以在特定的时间段（例如夜晚），自动关闭到站钟等发生装置的声音，为楼宇住户提供安静的休息空间；其他时间段，到站钟等发生装置自动恢复声音，为电梯使用者提供声音提醒 At the hotel, apartments and other places, in a specific period of time (e.g. night), automatically close the station clock generator sound, keep rest space building tenants quiet; at other times, the station clock generator automatically restores the voice, for the elevator to provide voice reminder



语音安抚 Pacifying Voice	电梯处于特殊状态时语音安抚乘客情绪 When the elevator locates in the specific position,the voice will comfort passangers' feeling
斜线撤电流 Skew-line interrupt the electric current	电梯在停止时, 驱动器撤销电流成斜线方式, 提高电梯停止舒适感 When meet the elevator stop operating,the drive interrupt the electric current,become a mode of skew-line,improve the comfort level of elevator lay off
检修零速停车 Repair zero speed stop	检修运行时, 零速停车。提高主机抱闸的运行寿命 Under the repair,elevator stop operating with zero speed,increase the service life of main machine braking
免调试功能 Adjust-free function	通过控制板上的拨码与检修开关组合, 自动运行后完成调试 By the toggle and repire switch in control plate,after the elevator operating automaticly,complete the debug

Optional function  
可选功能

开门待机 Door open standby	改变普通电梯的关门待机功能, 通过设置参数使其开门待机, 保持电梯内空气流通 Change the door close standby function in usual elevator ,by set up the parameters to make the ealevator open the door and standby,maintain the air to circulate
厅外防捣乱 Anti-trouble outside the hall	厅外召唤有上召和下召, 如果误操作普通电梯会开关两次门, 该功能就是减少一次开关门, 提升运行效率 Hall call is divided into up call and down call.if the passenger operate wrongly,the elevator will open and close twice,this function can reduce open and close the door,improve the operate efficiency
司机直驶 Attendant non-stop	当司机开关动作时, 由司机按下司机直驶开关, 可旁路所有的外召, 待关闭直驶开关后, 再响应外召指令 Press the non-stop bottom, elevator will move straightly to instruction floor
开门保持按钮 Door hold button	轿厢内配置开门保持开关, 此开关动作时, 电梯不关门, 在设定的保持开门时间内, 电梯不关门, 超过等待时间后, 自动关门。 开门等待过程中, 按下关门按钮, 可取消开门保持等待, 立刻关门 The cabin is configurated the opening-keeper .when the switch action, the elevator is not closed, in the setting of the hold open time, the elevator is not closed, more than waiting time, automatic door.Open the door waiting for the process, press the close button, the door can be closed immediately cancel keep waiting
并联/群控功能 Duplex/Group control	当有两台电梯时可选择并联功能, 三台电梯时可选择群控功能。并联或者群控时, 系统根据优先级排序, 派最快的可达到的电梯, 服务外呼指令, 减少乘客等待时间。 Two elevators could choose duplex control, three elevators could choose group control. In duplex or group control, the system will dispatch the fastest accessible elevator according to the priority order, serve the outbound call instruction, shorten the system response.
语音报站 Voice ring	配备语音报站装置, 可准确告诉乘客电梯的当前停靠楼层、门的状态等信息 The elevator is equipped with voice broadcast device,tells the passangers the layer that elevator is stopping,the state of door and other informations

厅外到站钟 Hall chime	一般在外召显示器上集成厅外到站钟, 给乘客以提示 General in the call and display integrated Hall station clock, for passengers to prompt
紧急消防员服务 Emergency fireman service	当轿厢内预设的钥匙开关被启动时, 电梯取消所有召唤信号, 电梯只能应答轿厢内指令, 配合消防员灭火, 此功能需配合消防电梯使用 When the key switch that be preinstalled in car is started,the elevator cancel all the call signalling,respond the signal from inside of car only,coordinate with fireman to put out the fires,this function need to coordinate with the fire elevator
消防迫降成功反馈 Fireman landing success feedback	选配消防功能时, 系统可提供无源的开关触点, 反馈消防迫降的成功信号给小区的消防系统 Isolation button touch could feedback fireman landing success signal to area fireman system
停电自动应急疏散功能 Automatic rescue device	当选配该装置时, 电梯停电时, 可自动切换到应急救援状态, 就近楼层停靠, 开门放人, 运行过程中有语音安抚 This device is used for rescue operation in case of power shutdown, it is powered by a rechargeable battery, when a sudden power cut happens, a sound signal will comfort the trapped passengers, then the car will move towards to the near floor, keep the door open to the passengers
反向指令不登记 Reverse order cannot register	在向上或向下运行时, 对于与当前运行方向相反的指令不能登记 Under the operate upward and downward,the command that reversal of the direction of operate cannot be registered
小区监测系统 Area elevator system	小区监测系统是由微机在小区范围内实现对电梯进行全面监测的智能化管理系统, 可为大楼智能管理提供数据 (BA) Computers carry out district monitor system. This function can provide computed monitoring for all the elevators in this district and offer the BA for the computed management of the building
楼宇电梯监视接口 Building elevator supervisory interface	电梯可以为用户的大楼智能管理系统提供离散型电梯运行状态信号, 主要信号为: 运行方向、楼层信息、安全信息等 The elevator provide the discrete type running state singals for the building intelligent management system,main singals : running direction、floor information、safety information
视频电缆接口预留 (含视频电缆) Reserve the vision cable interfaces (include vision cable)	为电梯轿厢内安装视频监控预留电缆接口 (含视频电缆) Cable interfaces are reserved for the installation of video monitor .(include vision cable)
提前开门功能 Advanced door opening	启用该功能, 可使电梯在进入门区时, 电梯速度降到设定值时开门, 提高运行效率 (≥2.0m/s时, 该功能为基本功能) Start the function,it can make the elevator speed slow down to the set-value and open the door when the elevator enters the area of door,improve the operating efficiency(when speed ≥2.5m/s,the function is basic function
IC卡功能 IC card	用户IC卡刷卡后, 自动登记楼层指令, 或开放相应楼层登记权限, 允许乘客手动登记指令 After swiping the IC card, automatically register the floor instruction, or open the corresponding floor registration authority to allow passengers to manually register the instruction
到站按钮预提醒 Arrival button pre-remind	根据自动计算的最优曲线, 提前预告电梯下一个停靠楼层, 其对应楼层按钮闪烁 According to the optimal curve automatically calculated, pre-remind the next landing floor of the elevator, and the corresponding floor button flashes
到站显示器预提醒 Arrival display pre-remind	根据自动计算的最优曲线, 提前预告电梯下一个停靠楼层, 其对应楼层数字闪烁 According to the optimal curve automatically calculated, pre-remind the next landing floor of the elevator, and the corresponding floor number flashes
自动再平层 Auto re-leveling	当电梯开门时, 由于人员的进入, 钢丝绳的伸缩导致电梯层位置发生变化, 此时电梯会以缓慢的速度, 自动纠正平层位置。 (≥2.0m/s时, 该功能为基本功能) When the elevator door opening, because the personnel to enter, telescopic wire rope leads to elevator leveling position changes, the elevator will be at a slow speed, automatic correcting flat layer position.(When speed ≥2.0m/s, this function is basic function)



